

8 Exterior mirror

⇒ ["8.1 Exploded view - exterior mirror", page 418](#)

⇒ ["8.2 Removing and installing exterior mirror", page 419](#)

⇒ ["8.3 Wing mirror glass: removal and assembly", page 421](#)

⇒ ["8.4 Removing and installing cover for mirror", page 422](#)

8.1 Exploded view - exterior mirror

1 - Left overhead view camera - R244-

- ☐ Right side: surround-ings camera right - R245-

2 - Bolt.

- ☐ 2 off
- ☐ 0.7 Nm

3 - Driver side entry light in exterior mirror - W52-

- ☐ Removal and installation ⇒ Electrical system; Rep. gr. 94 ; Lights of the exterior mirror; Driver side entry light in exterior mirror - W52- : remove and install
- ☐ Right side: Front passenger side entry light in exterior mirror - W53- .

4 - Bolts

- ☐ 2 off
- ☐ 0.7 Nm

5 - Exterior mirror glass

- ☐ ⇒ ["8.3 Wing mirror glass: removal and assembly", page 421](#)

6 - Turn signal unit

7 - Exterior mirror base

8 - Bolt.

- ☐ 2 off
- ☐ 0.7 Nm

9 - Exterior mirror casing


- ☐ ⇒ ["8.4 Removing and installing cover for mirror", page 422](#)

10 - Nut

- ☐ 1x
- ☐ 20 Nm

11 - Cover

- ☐ Replace if this has been removed.

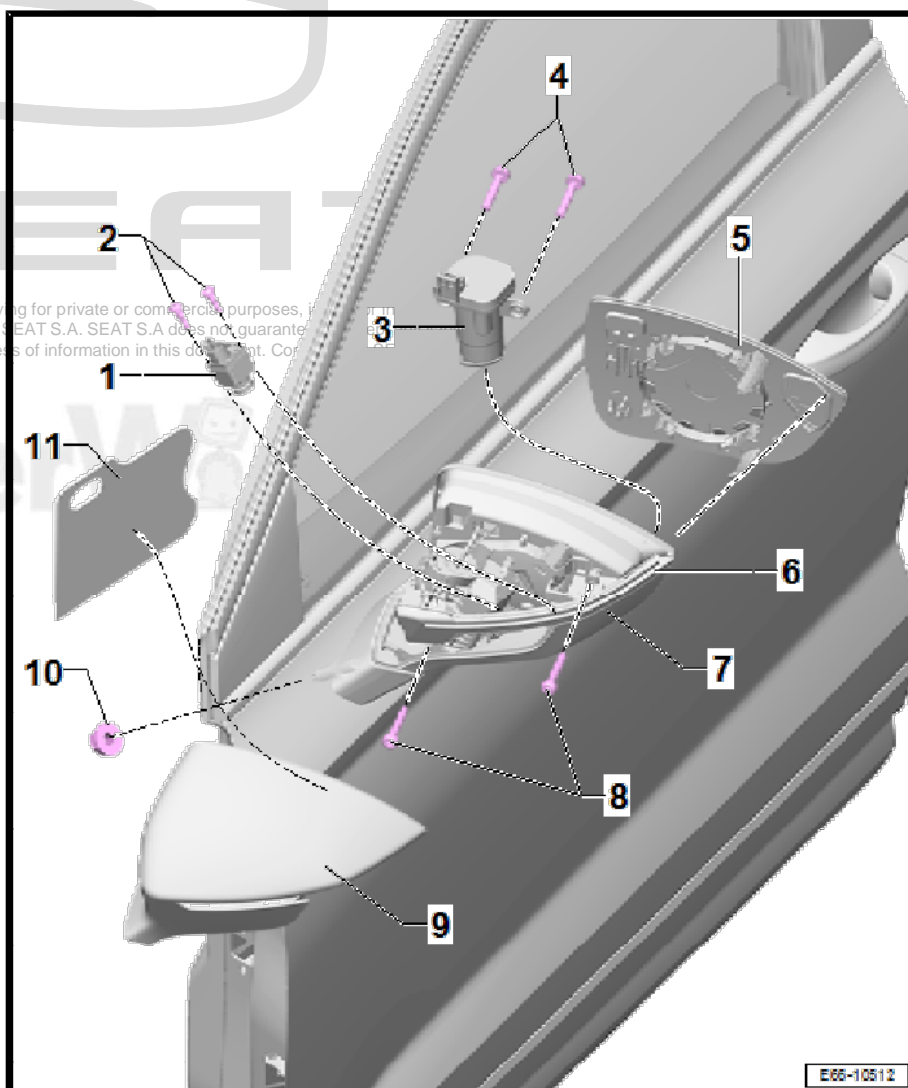


8.2 Removing and installing exterior mirror

Special tools and workshop equipment required

- ◆ Torque wrench - V.A.G 1331-



- ◆ Removal wedge - 3409-

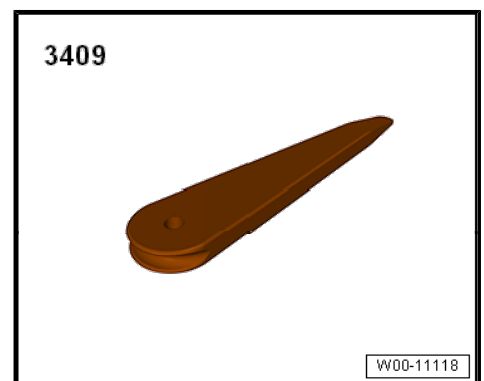

- ◆ Release tool - T10236-



Caution

The following does not have to be removed to remove the exterior mirror:

- ◆ *The loudspeaker*




Note

The sequences below describe the processes for removal and installation for the left side of the vehicle. The corresponding sequences for the right side are similar with the exception that, where applicable, the scope of the process is written by yourself.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by SEAT S.A. SEAT S.A. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.

Removing

- Move door window to "closed" position.
- Removing interior trim of front door: ⇒ Bodywork, interior installation work; Rep. gr. 70 ; Front door trim: removing and installation; front door trim: removing and installation.
- Using the removal wedge - 3409- remove the bushing -2-.
- Use the release tool - T10236- to remove the fixing clip -5- which secures the wiring of the exterior mirror.
- Unclip and separate electrical connector -6- from its bracket.
- Disconnect connectors -1- and-4-.
- Remove sealing foam -3-.

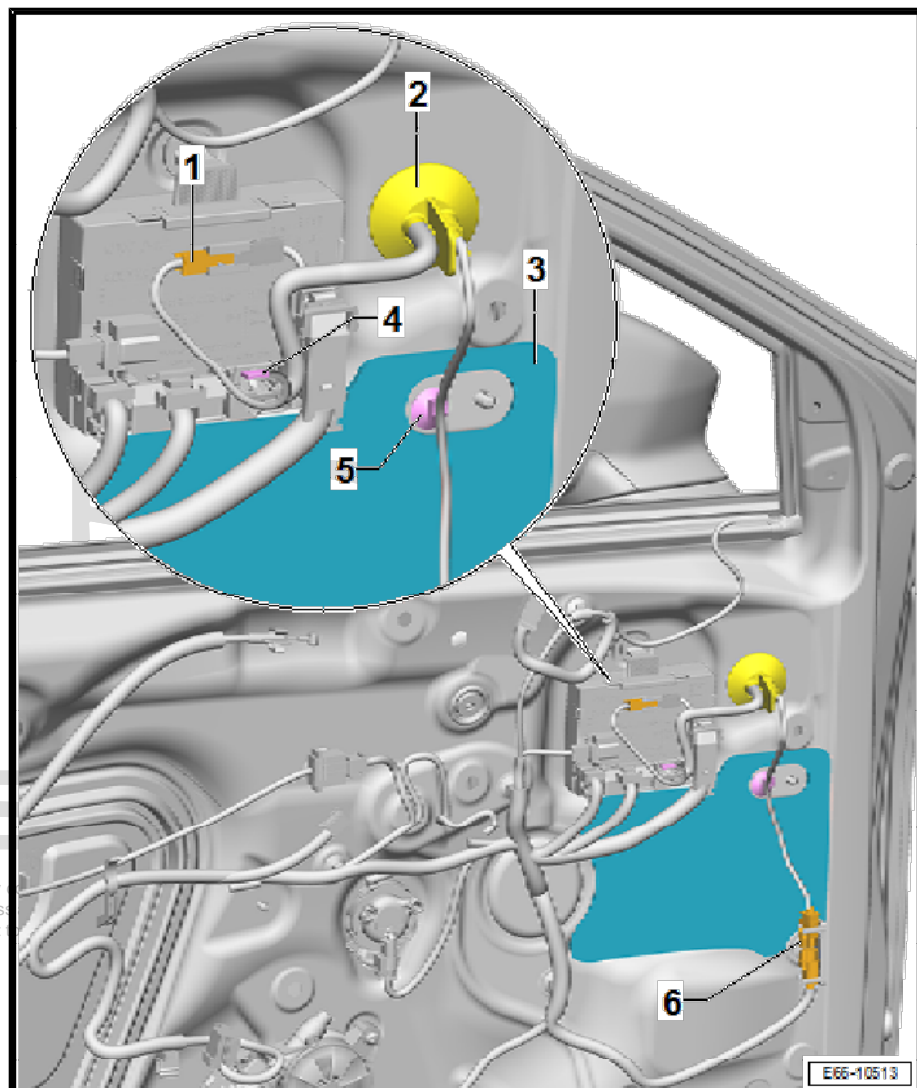

Protected by
permitted unless
respect

- Use the release tool - T10236- to remove the fixing clips -3- and -4- which secure the wiring -1- of the exterior mirror.
- Hold the exterior mirror so that it cannot fall down and remove the nut-2-.
- Remove wing mirror from door.

Installing


Fit in reverse order from removal, remembering the following:

- Use the tightening torque of the screws. See [⇒ page 418](#) .



Caution


Before mounting the door trims, the function of the manipulated components must be checked.

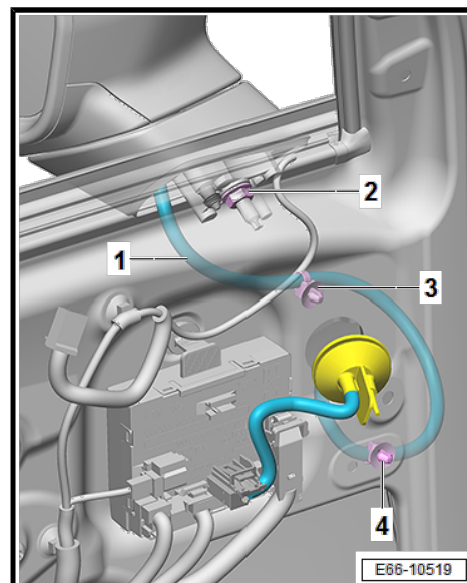

8.3 Wing mirror glass: removal and assembly

Special tools and workshop equipment required

- ◆ Wedges - T10383-

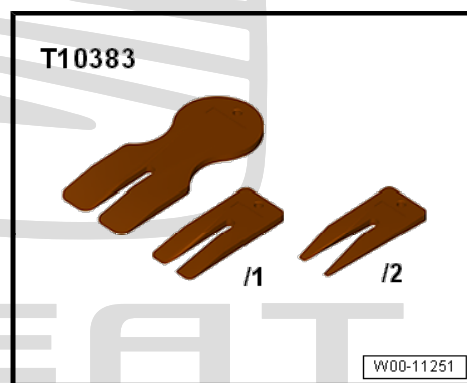

- ◆ Protective goggles and leather gloves

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.



DANGER!

Always wear safety goggles and leather gloves.

Removing


Only for vehicles with exterior mirror with electric folding function

- Position the exterior mirror so that you can work conveniently and safely.

Continued for all vehicles

- Protect the upper and lower area of the exterior mirror housing near the work area with masking tape.
- Press the lower area of the mirror glass -2- in the interior of the housing.

- Hold the mirror glass to prevent any damage to the wires connected in the upper area.
- Using the wedge - T10383- -arrow A- release the window -2- from the adjuster unit -1-.

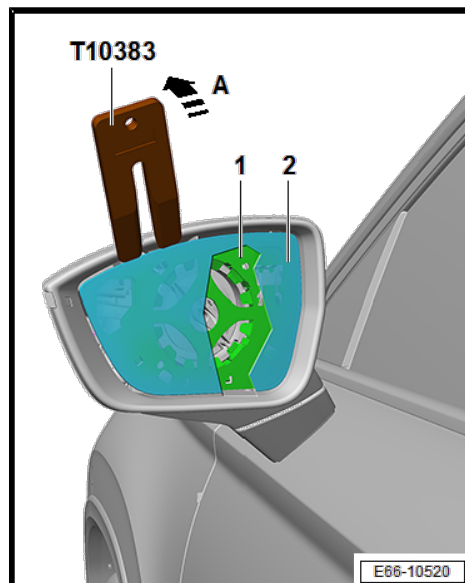

- Separate the electrical connectors -1- and -3- remove the window -2-.


Installing

Fit in reverse order from removal, remembering the following:



DANGER!

Always wear safety goggles and leather gloves.

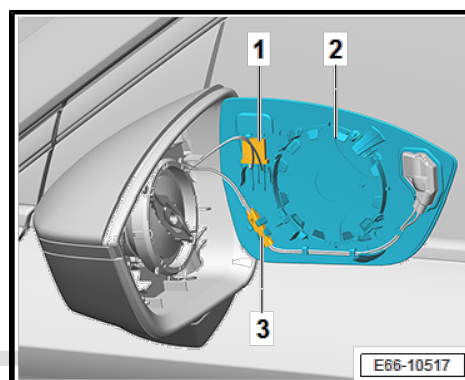

- Insert the connector of the mirror heating.
- Engage the guides -arrows- of the mirror -1- to the respective guides of the mirror base.
- Press the window glass in the centre against the regulating unit.

Mirror glass engages audibly.

Only for vehicles with exterior mirror with electric folding function


- Move the exterior mirror to its park position.

Continued for all vehicles



Caution


Check the function of the manipulated components.

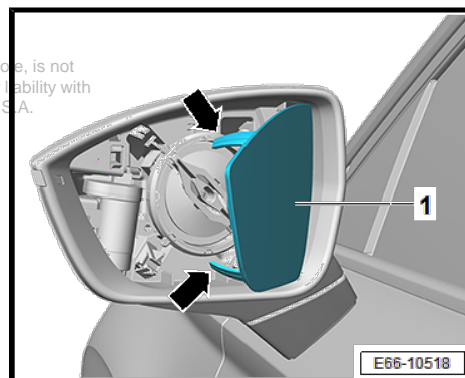

8.4 Removing and installing cover for mirror

Special tools and workshop equipment required


◆ Removal wedge - 3409-

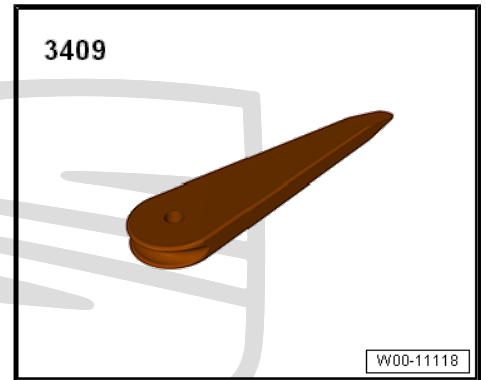

Removing

- Remove the wing mirror glass ⇒ [page 421](#) .
- Undo the clips -arrows A- and pull the housing -1- in the direction of the -arrows B- at the same time.

Protected by copyright. Copying for private use, in whole or in part, is not permitted unless authorised by SEAT S.A. SEAT S.A. assumes no liability with respect to the correctness of information.

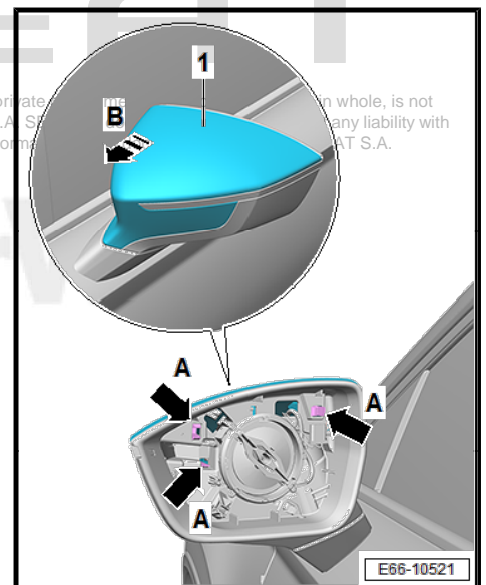


- With the Removal wedge - 3409- , release the clips on the housing -1- at the points indicated by the -arrow A-.
- Move the housing -1- it in the direction of -arrow B- and remove.


Installing

Fit in reverse order from removal, remembering the following:

- Make sure that the clamps are aligned correctly in the respective mounts.

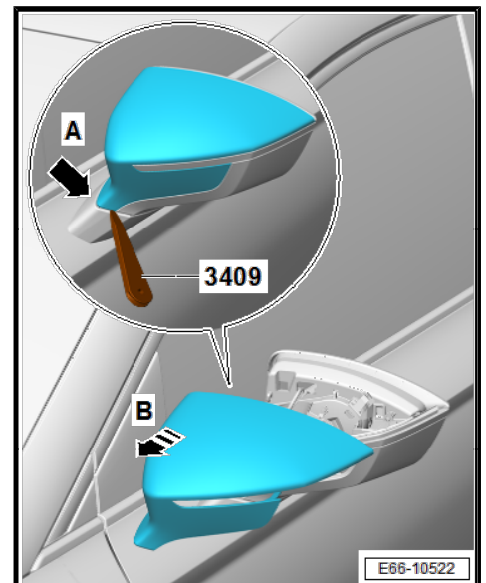

- Press in the housing, keeping to the correct order and the areas indicated by the -arrows 1, 2 and 3-. The clamps click audibly into place.
- Mount the wing mirror glass ➔ [page 422](#) .

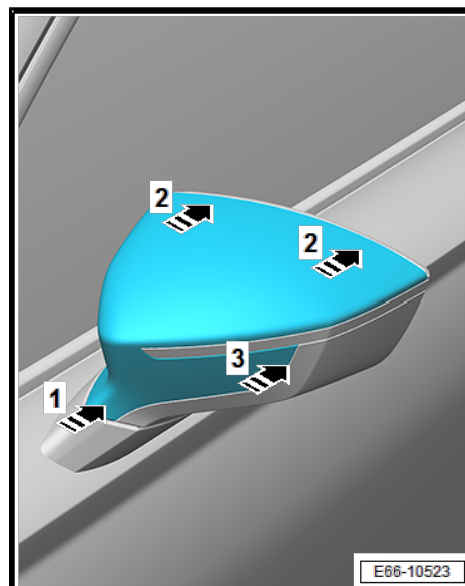

SEAT

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.





This document was created with the Win2PDF "print to PDF" printer available at
<http://www.win2pdf.com>

This version of Win2PDF 10 is for evaluation and non-commercial use only.

This page will not be added after purchasing Win2PDF.

<http://www.win2pdf.com/purchase/>